

①SIPフォンの画面でIPアドレスを確認

画面下の「次画面」ボタンを押す → IPアドレス 192.XXX.X.XXX 表示される

②インターネットでIPアドレスを検索

「192.XXX.X.XXX」で検索すると、下記画面が表示される

③パスワードを入力

Username 「admin」

Pass 「admin」



Copyright © Grandstream Networks, Inc. 2017. All Rights Reserved.

④オーディオ設定の変更

Accounts → Accounts1 → Audio Settings

Account	SIP User ID	SIP Server	SIP Registration
Account 1	3003	bp001-g07.jiyuuhoudai.com:6060	YES
Account 2	7015	bp001-g06.jiyuuhoudai.com:6060	YES

Copyright © Grandstream Networks, Inc. 2017. All Rights Reserved.

⑤in-audioに☑を入れる

Grandstream GXP1620 Admin Logout | Reboot | Factory Reset English

GRANDSTREAM
CONNECTING THE WORLD

STATUS ACCOUNTS SETTINGS NETWORK MAINTENANCE PHONEBOOK

Version 1.0.4.17

Accounts

- Account 1
- General Settings
- Network Settings
- SIP Settings
- Audio Settings**
- Call Settings
- Account 2

Audio Settings

Send DTMF in-audio via RTP (RFC2833) via SIP INFO

DTMF Payload Type

Preferred Vocoder - choice 1

Preferred Vocoder - choice 2

Preferred Vocoder - choice 3

Preferred Vocoder - choice 4

Preferred Vocoder - choice 5

Preferred Vocoder - choice 6

Preferred Vocoder - choice 7

Use First Matching Vocoder in 200OK SDP No Yes

Send DTMF

Specifies the mechanism to transmit DTMF digits.

[Reset to Default](#)

[Undo](#)

⑥スクロールし、「save」を押す

Version 1.0.4.17

Use First Matching Vocoder in 200OK SDP No Yes

Disable Multiple m line in SDP No Yes

SRTP Mode

Symmetric RTP No Yes

Silence Suppression No Yes

Voice Frames per TX

G723 Rate 6.3kbps encoding rate 5.3kbps encoding rate

G.726-32 Packing Mode ITU IETF

iLBC Frame Size 20ms 30ms

iLBC Payload Type

Jitter Buffer Type

Jitter Buffer Length

Hide Vocoder No Yes

設定変更完了